11/2016

## **Mod: CLR-BP**


Production code: 61601754






## **Installation Instructions**

Step 1: Place the suspension rail

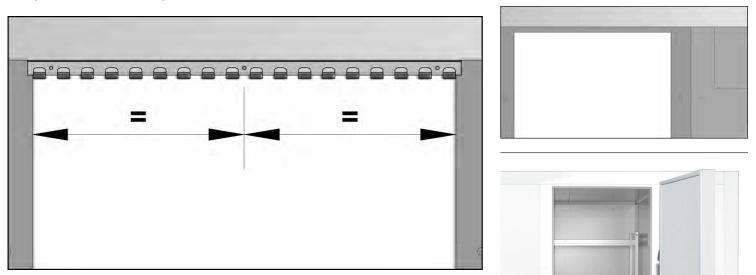


Step 2: Fix the suspension rail using the three mounting screws. After fixing the first screw make sure that the suspension rail is perfectly leveled.

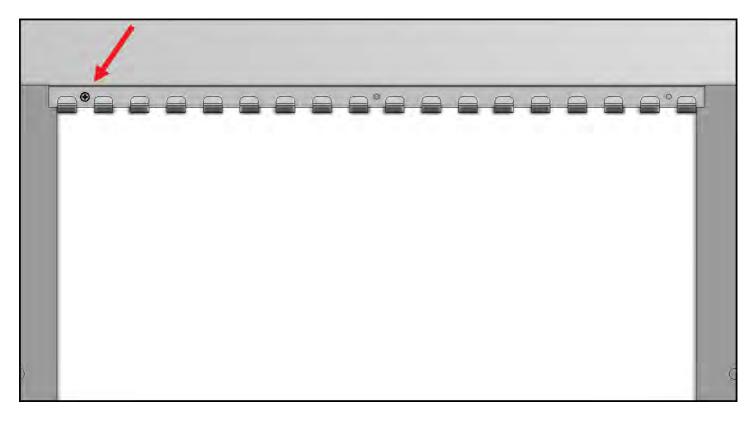



Step 3: After leveling the suspension rail fix the rest of the mounting screws.

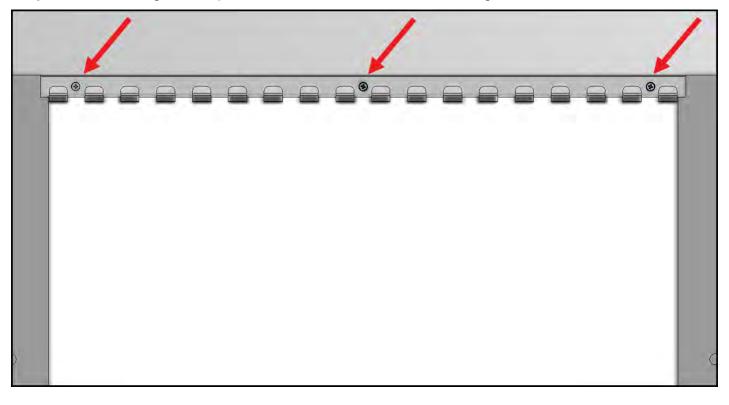

Step 4: Attach the strips.



Technical Files Diamond 2016