

07/2012

# **Mod: E60/2VC3T**

**Production code: 60/30 PVE**



**Diamond**  
catering equipment

1

2

3

4

5

6

A

B

C


D

E

F

G

H

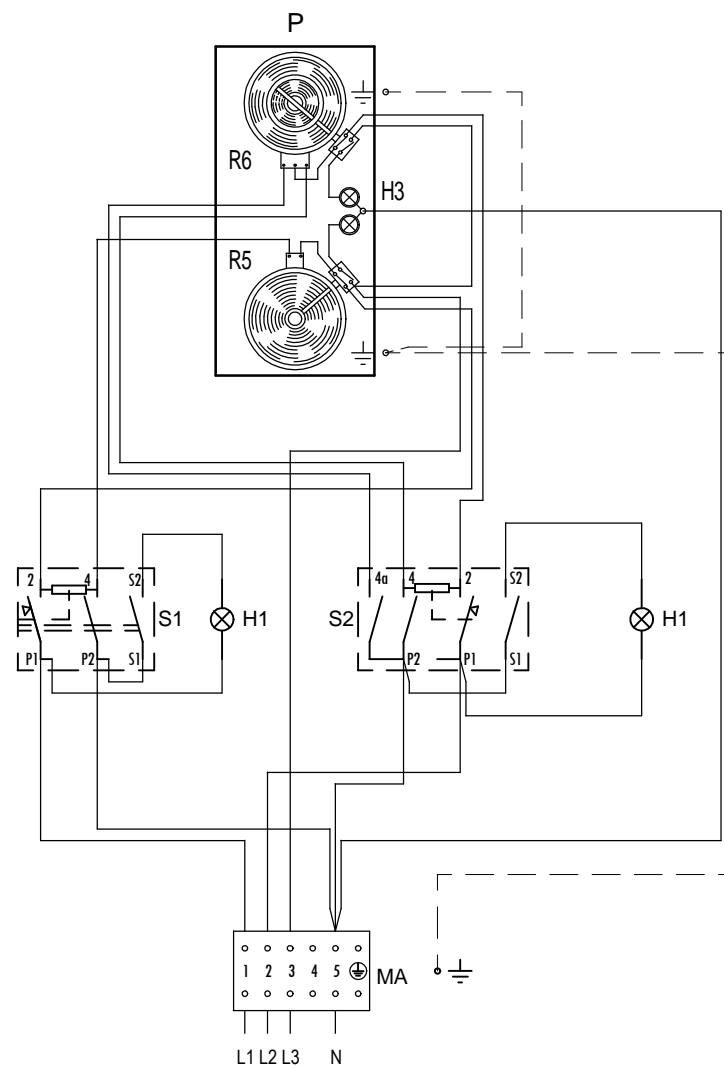

H1	SPIA VERDE _ LAMPE TEMOIN VERTE GREEN LIGHT _ GRUENE KONTROLLAMPE _ INDICADOR LUMINOSO VERDE		COD: 663.043.00
H3	GRUPPO 2 LAMPADE _ BLOC DE 2 LAMPES GROUP OF 2 LAMPS _ LAMPENBLOCK (2 LAMPE)		COD: 663.038.00
MA	MORSETTIERA ARRIVO LINEA _ BORNES ARRIVE LIGNE POWER INLET TERMINAL BOARD _ ANSCHLUSSBRETT _ BLOQUE TERMINAL LÍNEA	(PA223 40A 450V)	COD: 663.040.00
P	PIANO VETROCERAMICA _ PLAN EN VITROCÉRAMIQUE CERAMIC-GLASS _ GLASKERAMIK _ PLANO VETROCERÁMICAS		COD: 611.829.00
R5	RESISTENZA CIRCUITO SINGOLO _ RESISTANCE CIRCUIT UNIQUE SINGLE RADIANT HEATING ELEMENT _ HEIZSPIRALE MIT SCHNELLER AUFHEIZUNG	(1,8kW 230V 200N4-2599)	COD: 665.065.00
R6	RESISTENZA DOPPIO CIRCUITO _ RESISTENCE CIRCUIT DOUBLE DOUBLE RADIANT HEATING ELEMENT _ HEIZSPIRALE MIT SCHNELLER AUFHEIZUNG DOPPEL	(1,8kW 230V 215M7)	COD: 665.066.00
S1	REGOLATORE ENERGIA _ REGULATEUR D'ENERGIE ENERGY REGULATOR _ SIMMERSTAT	(E.G.O. 50.57021.010)	COD: 661.058.00
S2	REGOLATORE ENERGIA DOPPIO CIRCUITO _ REGULATEUR D'ENERGIE DOUBLE ENERGY REGULATOR DOUBLE _ SIMMERSTAT DOPPEL STOMKREIS	(E.G.O. 50.55021.100)	COD: 661.102.00



Prima di intervenire sull'apparecchiatura, scollegare l'alimentazione elettrica - Unplug the power supply before operating on the appliance  
 Bevor am gerät arbeiten ausschalten sré die elektrische speisung  
 Avant d'intervenir sur l'appareil, déconnectez l'alimentation électrique - Desconectar el alimentaci3n antes cualquier intervenci3n sobre el aparato

s

PIANO COTTURA VETROCERAMICA  
TABLE DE CUISSON EN VETROCÉRAMIQUE  
CERAMIC-GLASS COOKERS  
GLASKERAMIK KOCHFLÄCHE  
COCINA VETROCERÁMICAS

MODELLO

Pot.(kW) 3,6 volt(VAC) 400+3N ampere(A) 8

data: 26/09/2005

nome: P.L.

mod.: 23/03/2006

hertz(Hz) 50-60

CODICE

251.468.00

FOGLIO: 1/1